


**BNSF RAILWAY COMPANY** 

LOAD AND RIDE SOLUTIONS DRAWING

Bagged Cargo

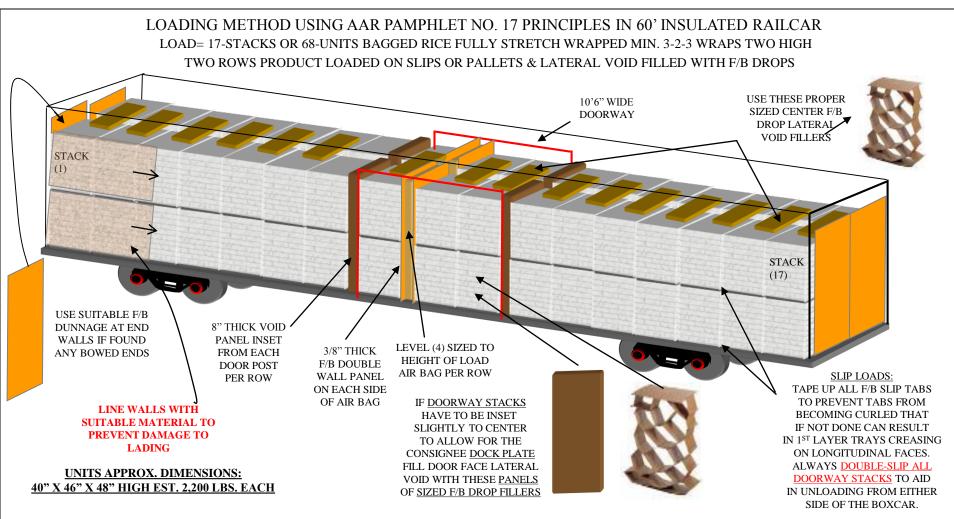

1. FOR PROPER UNITIZATION ALL UNITS SHOULD BE FULLY WRAPPED (3-2-3) WRAPS TOP TO BOTTOM- INCLUDING PALLETS.

2. MOST IMPORTANT PRINCIPLE IS TO LOAD PRODUCT (EVERY STACK) TIGHT LONGITUDINALLY.

3. INFLATE D.I.D. AIR BAGS PER ROW TO 5-7 PSI DEPENDING ON NATURE OF LADING, USE AIR GAUGES TO INSURE PROPER INFLATION PRESSURE.

4. AFTER INFLATION MAXIMUM VOID D.I.D. BAG SHOULD FILL IS 12", IF LARGER USE ADDITIONAL VOID PANELS AT DIFFERENT STACK LOCATIONS.